

- 6=1/4x1 YELLOW SQUARE
- U-BOLT-A
- 2=7/16 LOCK NUTS-B
- 4=7/16 SAE WASHERS-C
- 2=5/16X1 1/4 BOLTS-D
- 4=5/16 SAE WASHERS-E
- 2=7/16X2 1/4 BOLTS-F
- 2=5/16 LOCK NUTS-G
- 4=1/4 ROD CAPS-H
- 2=1" PLUGS-I



#BR107

UNIVERSAL BOW RACK
HONDA RANCHERS, POLARIS MODELS


- 1= ALUMNI. WASHER-J
- 2=3/16X1 1/4X7/8 CLIPS-K
- 1=GR BRACKET L SHAPE-L
- 2=3/8 CARRIAGE BOLTS-M
- 2=RUBBER STRAPS-N
- 2=SOLID RUBBER BLOCKS-O
- 2=ADJUSTMENT PLATE(PLASTIC)-P
- 2=BASE BRACKETS(PLASTIC)-Q
- 12=1/4 SAE WASHERS-R
- 12=1/4 NUTS-S
- 2=3/8 NUTS

1=1" TUB. 32" LONG
1= MAIN BRACKET

THESE ARE
PACKED IN THE
BOX.

PACK HARDWARE IN 6X8
BAG THEN PACK IT INTO
THE 9X12 BAG WITH OTHER
PIECES.

MAKE SURE ALL
PIECES ARE IN A
9X12 BAG.

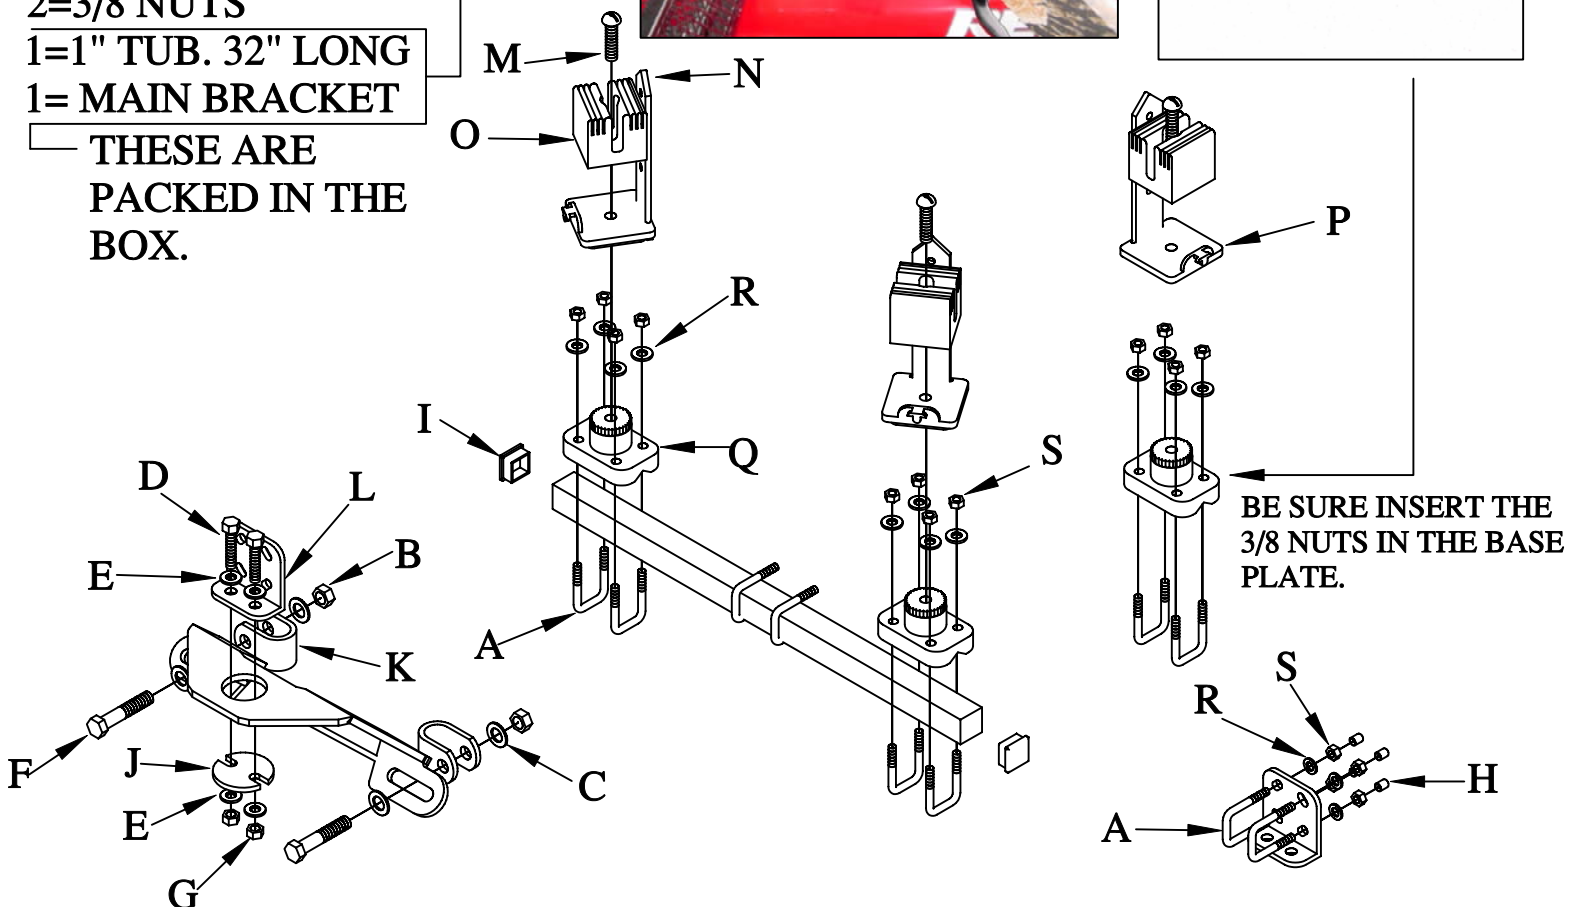

BE SURE INSERT THE
3/8 NUTS IN THE BASE
PLATE.