


**SMI SAVANT
MFG., INC.**

**5008 for the Honda 300's
Fits all the 300's**

- 12 = 1/4 Flat Washers
- 4 = 1/4 Lock Washers
- 4 = 1/4 Nuts
- 4 = 1/4 Lock Nuts = H
- 2 = 1/4 x 1 Bolts = I
- 2 = 1/4 x 2 Bolts = F
- 2 = 1/4 x 1 U-Bolts
- 2 = 1" Plugs
- 1 = Pedal extension = A
- 1 = 1/2 ID x 1 1/2 OD x 7/16 Plastic Washer = B
- 1 = 7/16 Large Flat Washer (USS) = C
- 1 = 7/16 Lock Washer = D
- 1 = 7/16 Nut = E
- 2 = 1/4 x 7/8 Galvanize Spacer = G

The brake pedal extension (A) and the plastic washer (B) will sit on top of the brake pedal. C,D,E will then bolt up to the bottom of the brake pedal of the bike. When bolting the floorboards in place, make sure there is a 1/8 to a 1/4 gap between the edge of the pocket of the floorboard and the edge of the brake extension. Always keep the brakes properly adjusted. **Also the gear shifter needs to be move up one notch.**

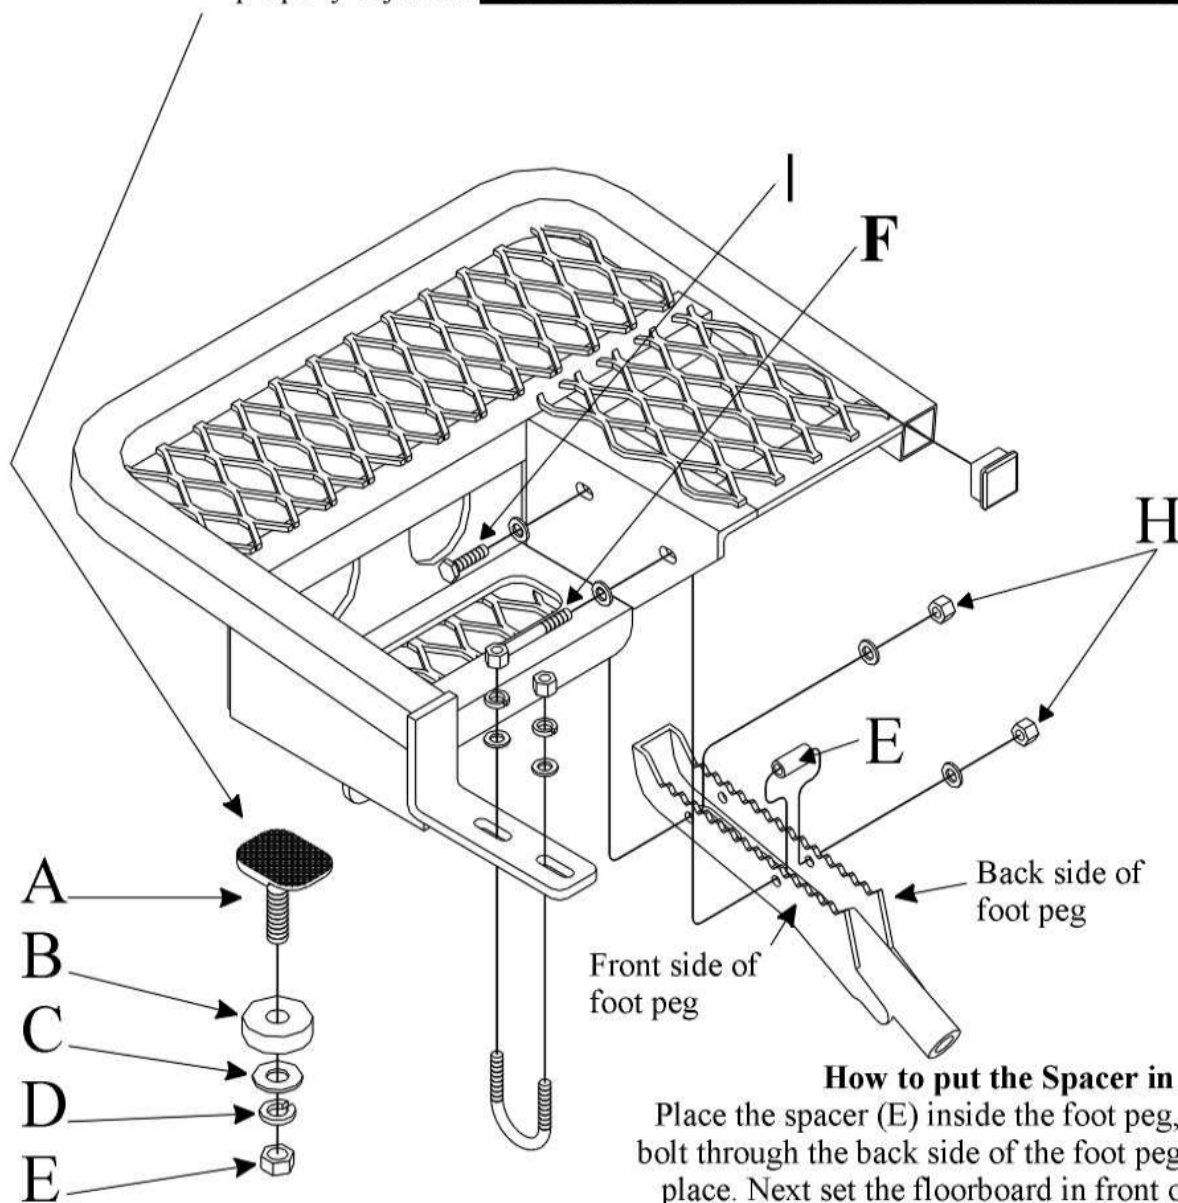

How to put the Spacer in place?

Place the spacer (E) inside the foot peg, then put a 1/4 rod or bolt through the back side of the foot peg to hold the spacer in place. Next set the floorboard in front of the foot peg, then push the 1/4 x 2 bolt (F) through the floorboard, through the spacer, then out the back of the foot peg. Next install all the rest of the bolts. If you have a question call 318-738-5896.