


3=1/4 MACHINE
SCREWS(RHSS-025-0062)-A
3=1/4 USS WASHERS-B
3=1/4-20 SMALL CLIPS
(94808A156)-C



5021-AL

REAR ALUM. DIAMOND
FLOORBOARD COVERS. POLARIS
RANGER 700 CREW CAB 2009

REMOVE THE BLACK TORX
HEAD SCREWS THAT ARE ON
THE FLOORBOARD. PLACE THE
COVERS INTO PLACE AND
SCREW THE COVERS DOWN
WITH THE BLACK TORX
SCREWS AND SUPPLIED
HARDWARE.

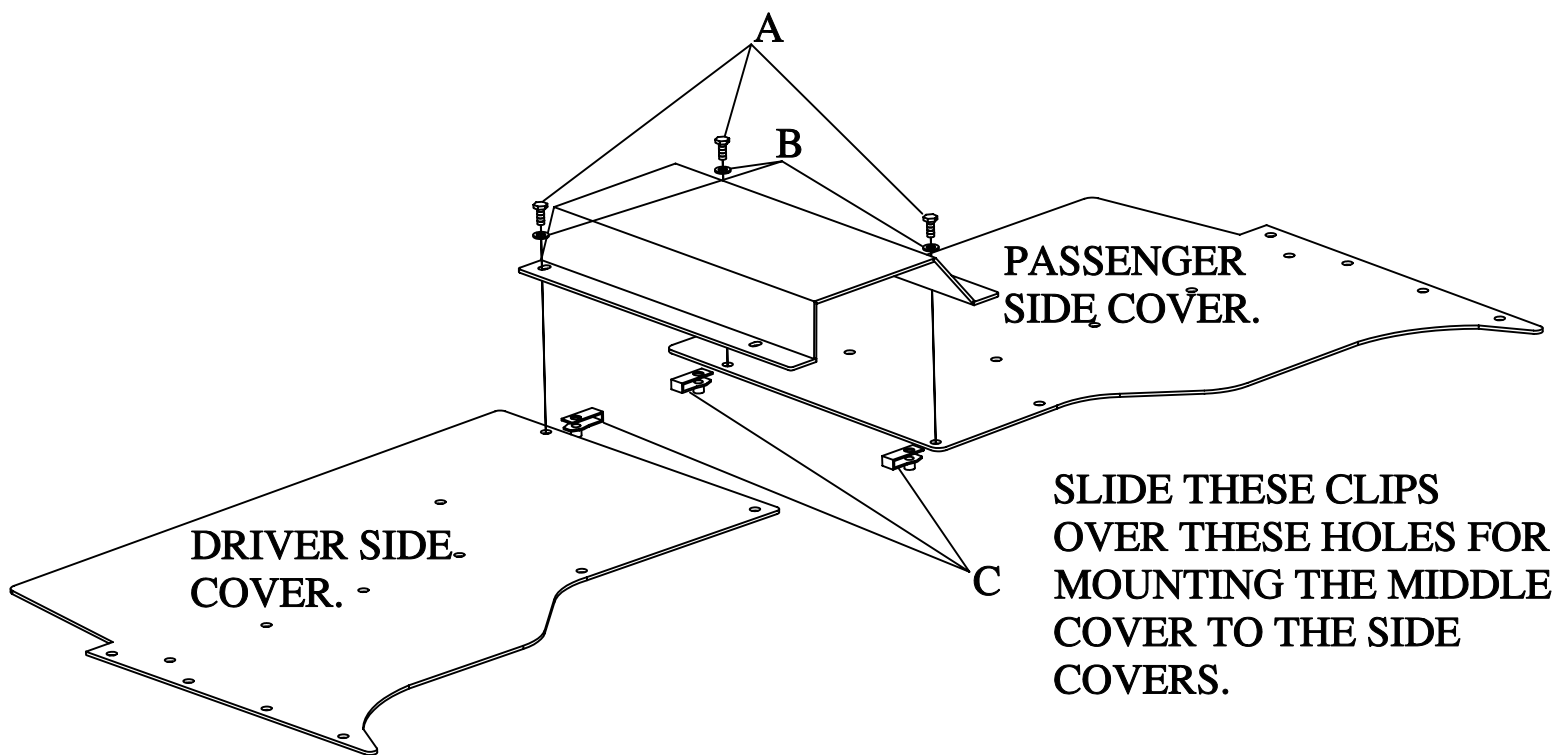

SLIDE THESE CLIPS
OVER THESE HOLES FOR
MOUNTING THE MIDDLE
COVER TO THE SIDE
COVERS.