

FG 108

4 = 5/16 x 1 ¼ Bolts

4 = 5/16 (S.A.E.) Small Flat Washers

You have to remove the headlights. Then put this part of the grill between the light and the frame. Reinstall the lights back in place and readjust them.


Polaris Front Grill

Sportsman 500

Xplorer 500

Xplorer 400L

Xplorer 300

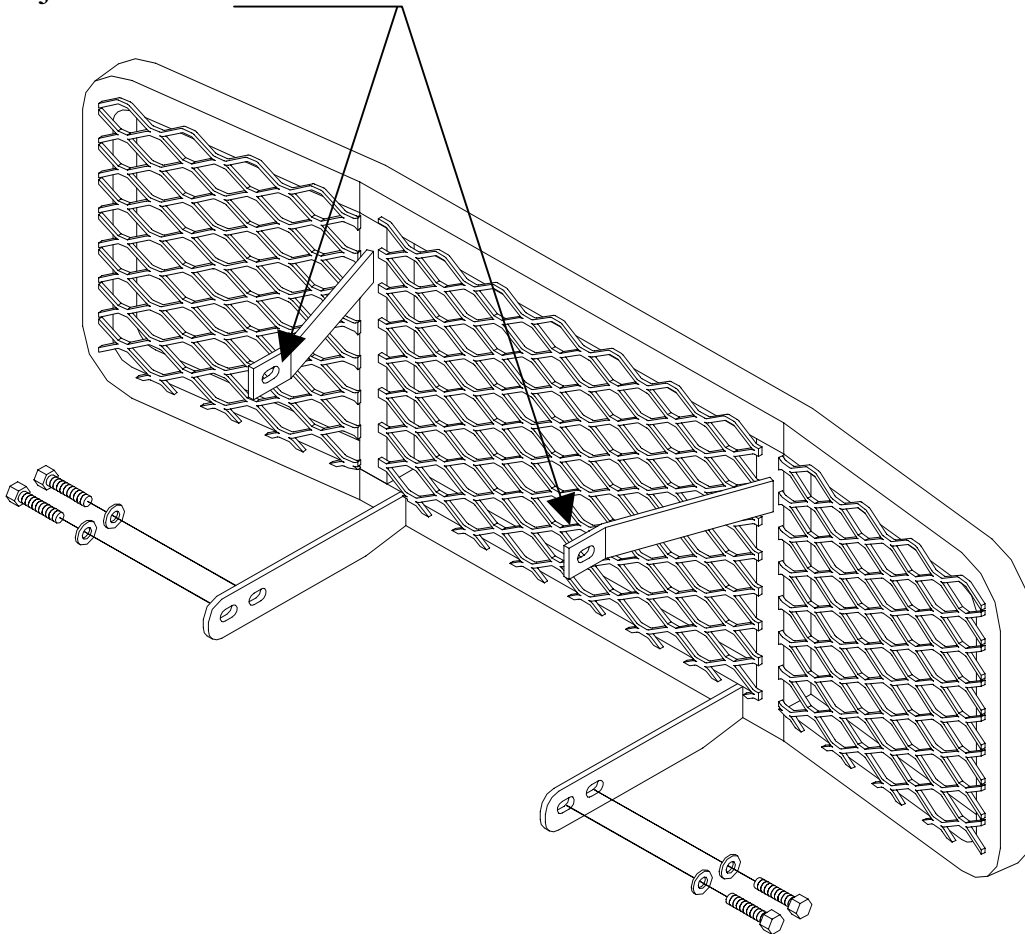

Take a look at us at
www.savantmfg.com