


2=1/4 X 3/8 U-BOLTS-A  
4=1/4 LOCK NUTS-B  
8=1/4 SAE WASHERS-C  
2=1/4 X 1/2 U-BOLTS-D

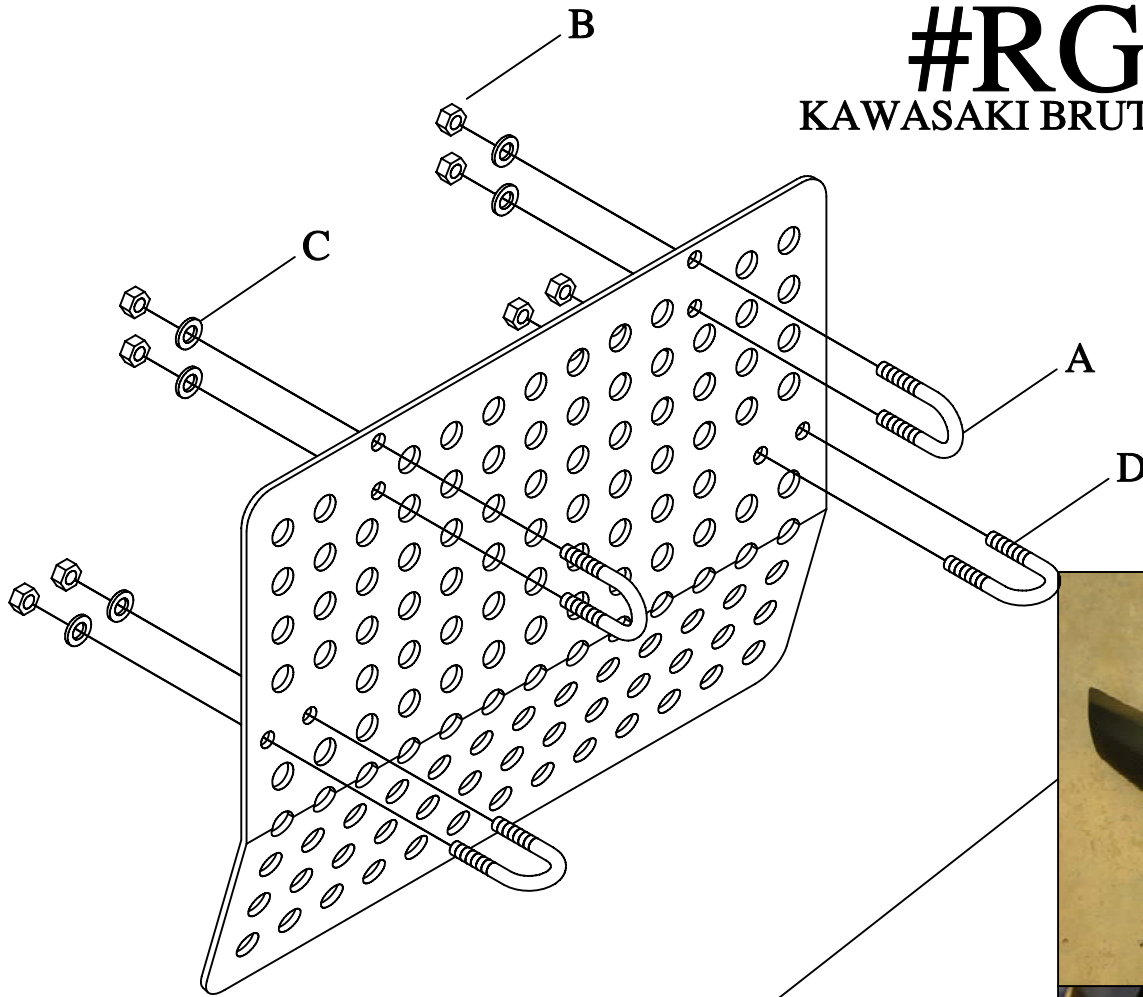

# #RG103

KAWASAKI BRUTE FORCE 750 4X4



TO MAKE THE INSTALLATION EASIER REMOVE THE FRONT PLASTIC BUMPER.

THEN REMOVE THE BOTTOM SCREW THAT SECURES DOWN THE SIDE PLASTIC GUARD. MOVE THE GUARD BACK TO INSTALL THE RG103. THIS IS WHERE THE RG103 WILL SLIDE IN FROM THE SIDE.

ONCE THE RG103 HAS BEEN INSTALLED REPLACE THE PLASTIC GUARD.

