


4=1/4 X 1 BOLTS
4=1/4 USS WASHERS
4=1/4 U NUTS



RG106

HONDA FOREMAN 500 2012 GUARD.

REMOVE THE SIDE COVERS OFF RADIATOR THEN REMOVE THE THIN FACTORY RADIATOR GUARD. SLIDE THE CLIPS ONTO THE NEW GUARD AS THE PIC SHOWS. THEN SLIDE BETWEEN THE ALUM TABS ON THE RADIATOR. PLACE THE SIDE PANELS BACK ONTO THE SIDE OF RADIATOR AND SECURE WITH THE WASHERS AND BOLTS PROVIDED. THERE IS A SMALL INDENTION ON THE TOP EDGE OF THE GUARD THIS WILL INDICATE THE TOP OF THE GUARD WHEN INSTALLING.

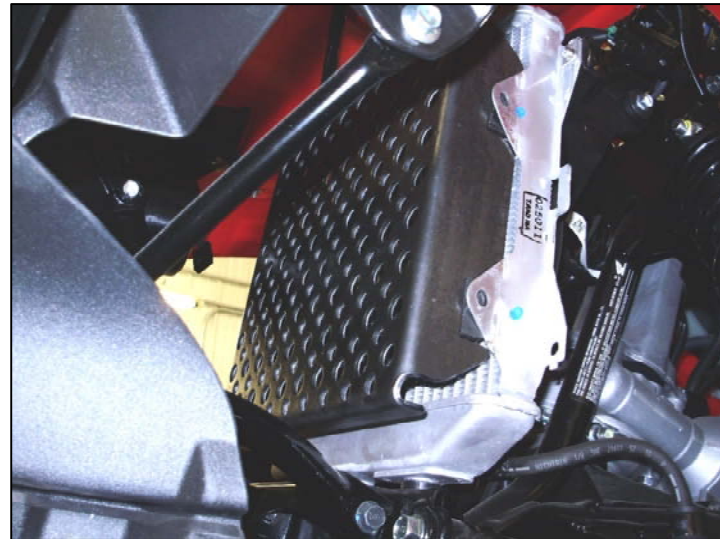

REPLACE THE PLASTIC GUARDS ON SIDE AND ON THE BOTTOM...

