

- 1=5/16 X 1 BOLTS-A
- 1=5/16 X 1 1/4 BOLTS-B
- 2=5/16 LOCK NUTS-C
- 3=5/16 USS LARGE WASHERS-D
- 1=5/16 SAE SMALL WASHER-E
- 1=3/8 SAE WASHER-F
- 1=10MM X 1.25 X 75MM BOLT (MHHB-M10-1.25 75)-G
- 1=1/2" SPACER (BIN 61)-H



#RH110

HONDA RANCHER 420 4X4

THIS RECEIVER HITCH WILL USE ANY 2" INSERT OFF OF ANY AUTOMOBILE RECEIVER HITCH.


(CAUTION)

ONCE INSTALLED MAKE SURE THE TUBE THAT IS TO BE INSERTED INTO THE #RH110 DOES NOT EXCEED PASS THE END OF THE #RH110. THIS IS SO NOTHING WILL HIT THE SHOCK AS THE TRAVEL MOVES ON THE REAR AXLE OF THE ATV.

MUST REMOVE YOU STOCK TRAILER HITCH TO INSTALL THE #RH110.


USE YOUR ORIGINAL NUTS FROM THE REAR DIFF HERE.

USE YOUR ORIGINAL HITCH NUTS AND BOLTS HERE.

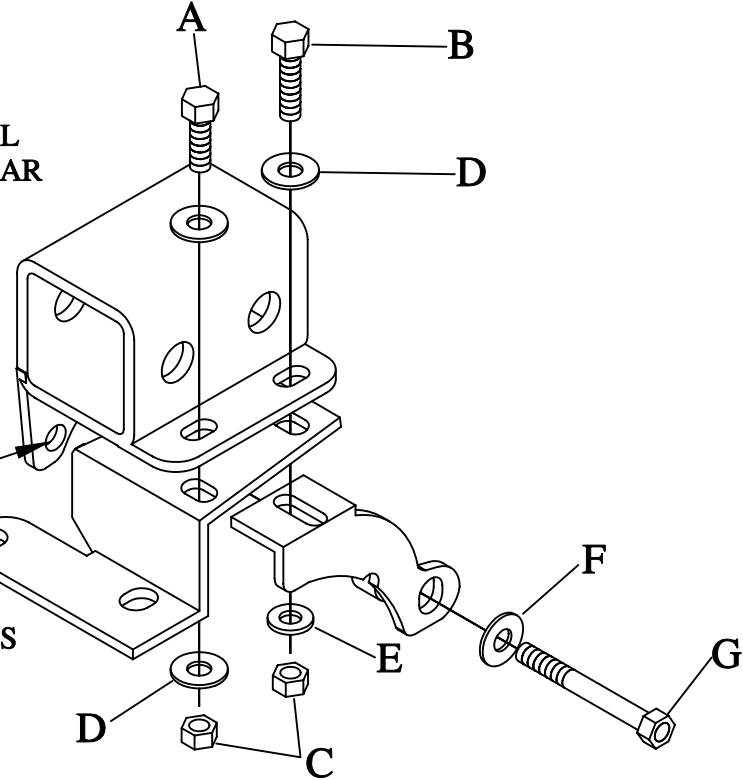

(REAR VIEW OF THE MOUNT)

REMOVE THE BOTTOM SHOCK BOLT AND REPLACE IT WITH THE 10MMX1.25X75MM BOLT. MUST USE THE METRIC NUT THAT WAS REMOVED ON THE STOCK BOLT.

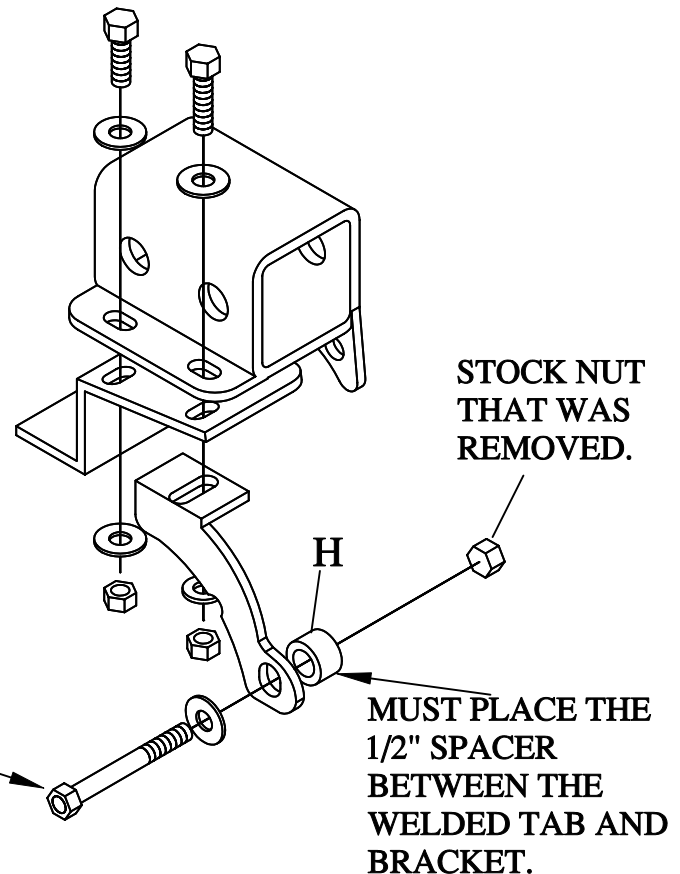

STOCK NUT THAT WAS REMOVED.

MUST PLACE THE 1/2" SPACER BETWEEN THE WELDED TAB AND BRACKET.