


4=1/4 LOCK NUT=A  
1=5/16 LOCK NUT=B  
1=5/16 USS WASHER=C  
4=1/4 SAE WASHER=D  
1=5/16X1 BOLTS=E  
1=3/16X1X3/16 ZINC  
PLATE WASHER=F  
2=1/4X3/8 U-BOLTS=G



# SP107-STL

HONDA 350ES 4X4

THE SP107-STL WILL MOUNT UNDER THE FRAME USING THE HARDWARE PROVIDED. THE 1/4X3/8 U-BOLTS WILL COME FROM ON TOP OF THE FRAME DOWN, THE 5/16X1 BOLT WILL COME FROM UNDER THE FRAME TOWARD THE MOTOR AS SHOWN IN THE PICTURE.

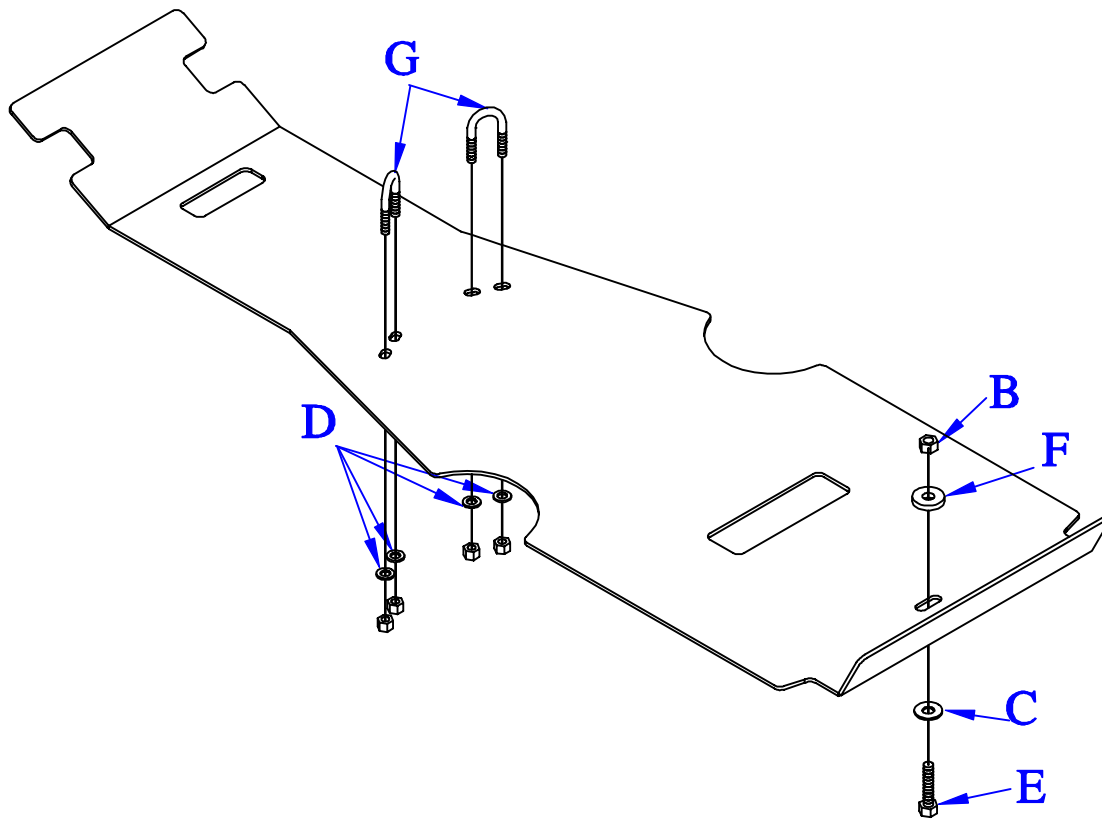

ANY QUESTIONS CALL:1-800-326-6880