


- 10=6MM X 40 X 1.25 BOLTS-A
- 10=1/4 USS WASHERS-B
- 2=3/16 X 1 ZINC PLATED WASHERS-C



# #SP112-STL

KAWASAKI BRUTE FORCE 750 4X4

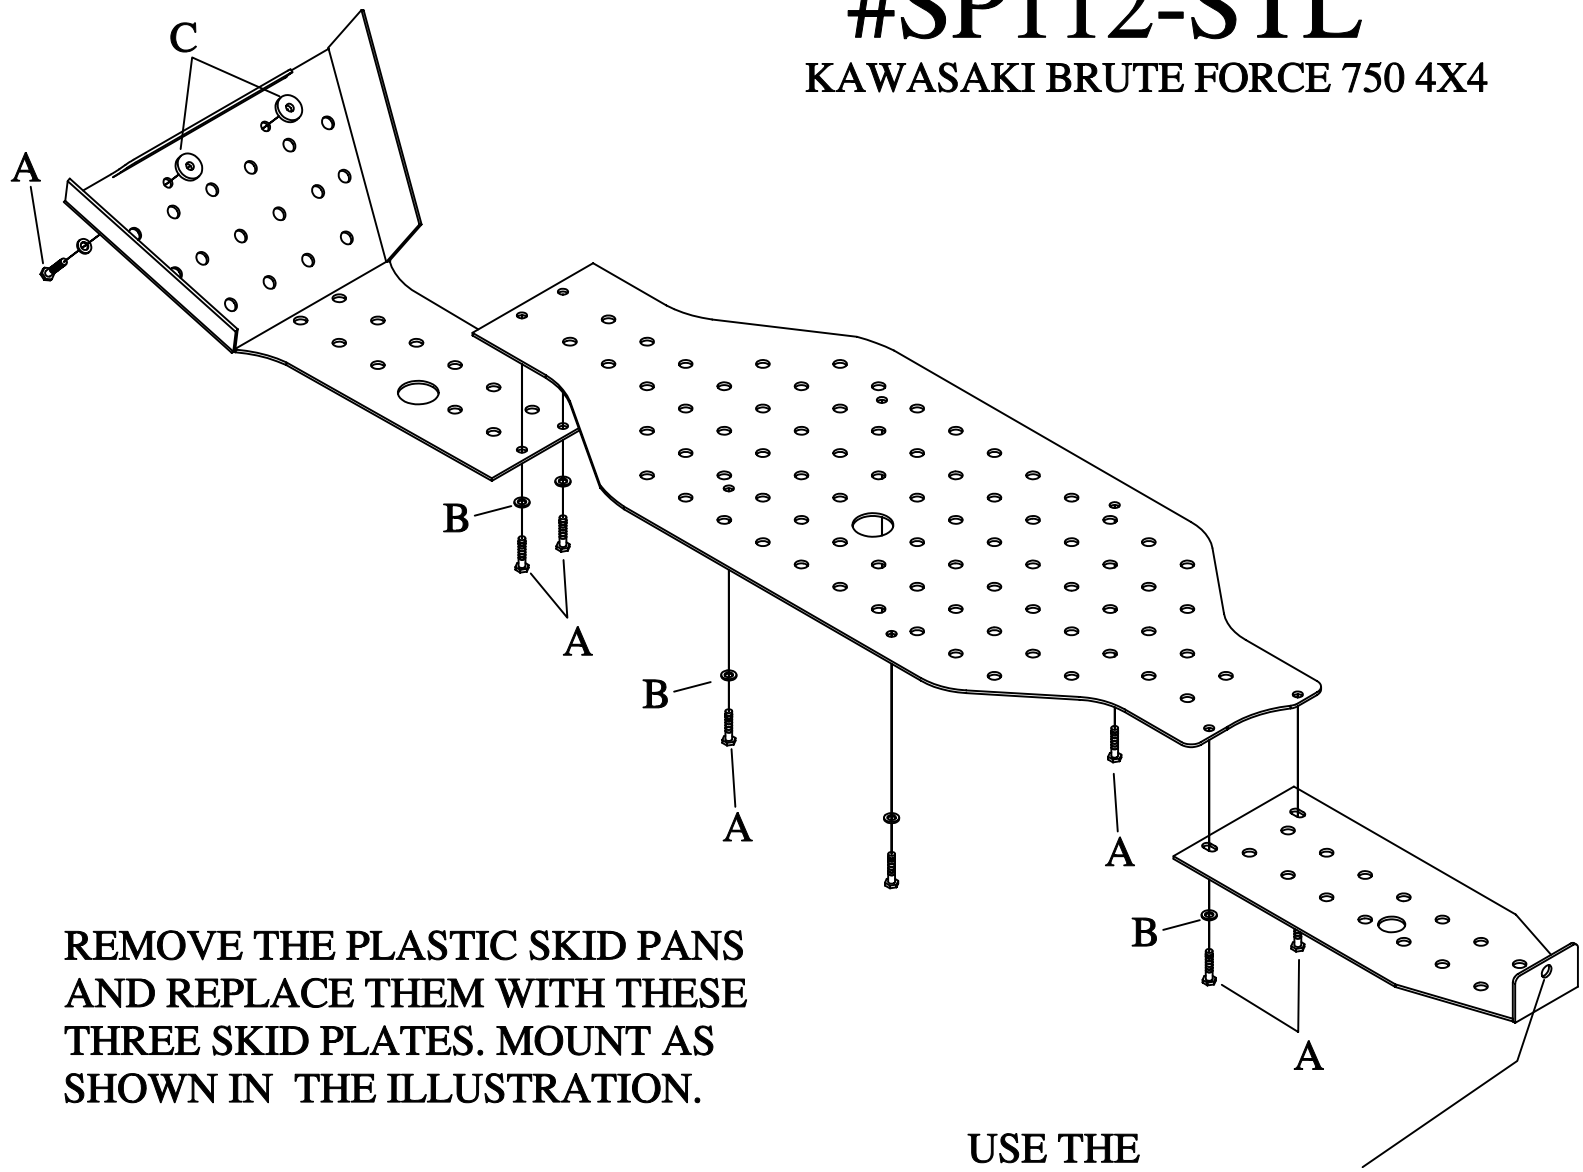

REMOVE THE PLASTIC SKID PANS AND REPLACE THEM WITH THESE THREE SKID PLATES. MOUNT AS SHOWN IN THE ILLUSTRATION.

USE THE ORIGINAL BOLT HERE TO MOUNT THE REAR SKID PLATE TO THE MACHINE.