

30=1/4 X 1 TORX SCREWS

4=1" ZINC WASHERS

MUST PRE DRILL 7/32" HOLE IN FRAME FOR ALL THE 1/4" TORX SCREWS.


USE PROPER LIFTING EQUIPMENT WHEN LIFTING THE MACHINE TO INSTALL THE KIT.

MUST REMOVE THE STOCK PLASTIC GUARDS. INSTALL THE GUARDS IN THE ORDER NUMBERED USE STOCK HARDWARE THAT WAS REMOVED. USE 1/4 TORX HEAD SCREWS EVERY WHERE THERE IS A TAPERED HOLE IN THE SKIDS.



## # SP132-AL

ALUM. SKID POLARIS  
RANGER 800 4X4 2010

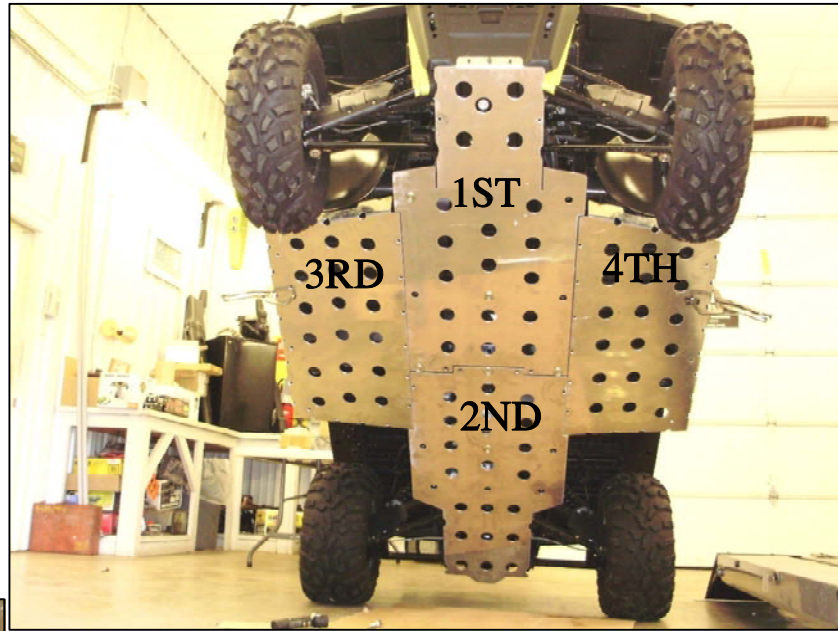

PLACE TWO OF THE 1" ZINC WASHERS UNDER EACH OF THE OUTER HOLES ON THE SIDE SKIDS. THEN INSERT THE SCREW INTO THE HOLES THAT WERE DRILLED AND FASTEN EACH SCREW.



PLACE TWO OF THE 1" ZINC WASHERS UNDER EACH OF THE OUTER HOLES ON THE SIDE SKIDS. THEN INSERT THE SCREW INTO THE HOLES THAT WERE DRILLED AND FASTEN EACH SCREW.

