

6=1/4X3/4 U BOLTS-A
 12=1/4 LOCK NUTS-B
 12=1/4 SAE FLAT
 WASHERS-C
 6=1/4X1 SQUARE
 U-BOLTS-D




#SS129 POLARIS 500 600 700
 SPORTSMAN REAR STICK
 STOPPER.


EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE
 PURCHASED WILL COVER MORE THAN THE
 ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN
 REPORTED TO BE TORN IN SOME CONDITIONS.
 SAVANT MFG. (STRONG MADE) DOES NOT
 WARRANTY AND TORN BOOTS.

THE SS129 MOUNTS ON TOP OF THE
 REAR A ARM, U BOLTS COME FROM
 UNDER THE A ARM .
 MAKE SURE THAT ALL U-BOLTS ARE
 CLEAR OF ALL BRAKE LINES TO THE
 REAR BRAKE CALIBER.

SOME SPORTSMAN 500 600 700 4X4
 WILL HAVE ROUND A-ARMS AND
 SOME WILL HAVE SQUARE A-ARMS.
 USE THE ROUND OR SQUARE
 U-BOLTS DEPENDING ON WHAT
 MODEL THAT YOU HAVE.

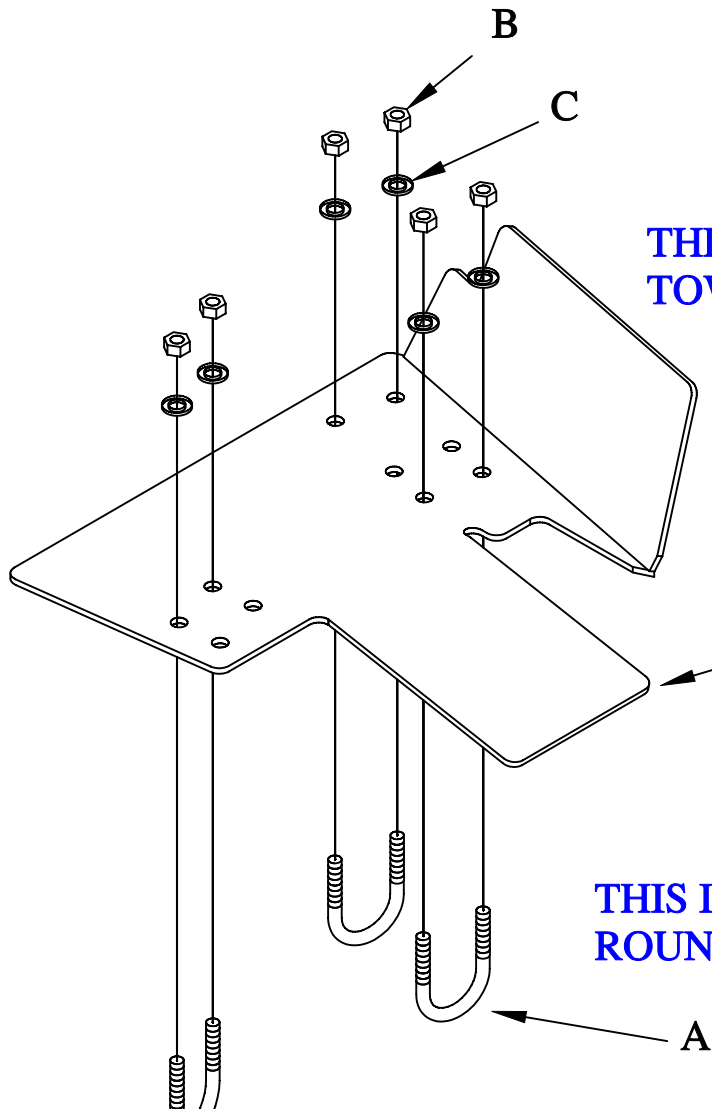

THESE ENDS
 TOWARD THE RIMS

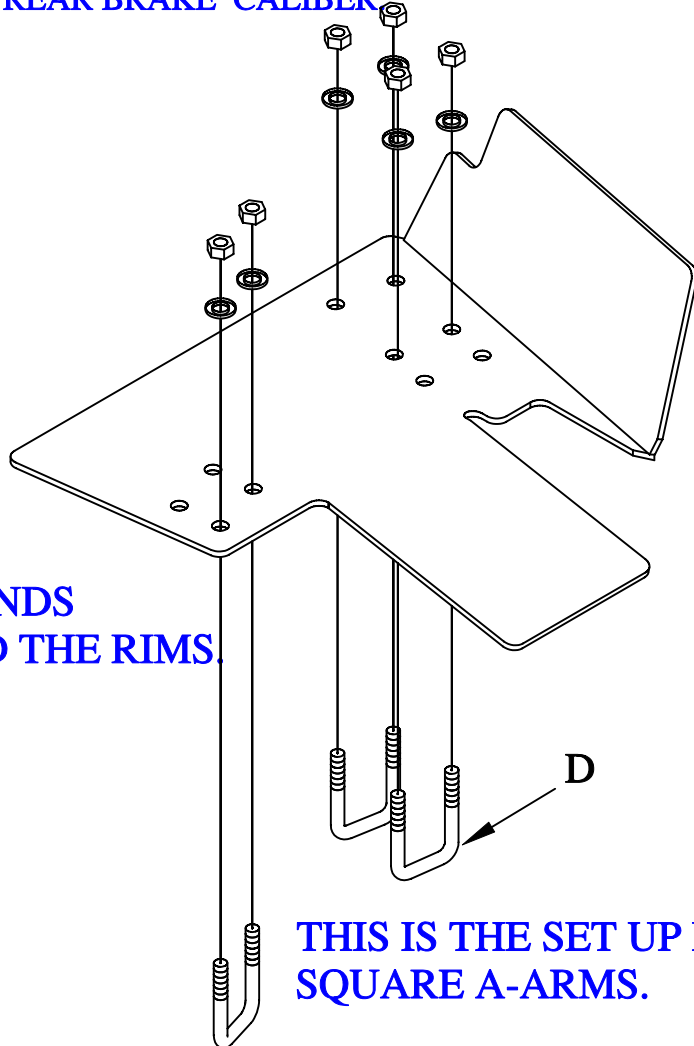

THIS IS THE SET UP
 SQUARE A-ARMS.

PAY ATTENTION TO WHAT
 HOLES THAT YOU ARE
 USING FOR WHAT SET UP.

THIS IS THE SET UP FOR THE
 ROUND A-ARMS.

ANY QUESTIONS
 CALL:1-800-326-6