


- 6=1/4X1/2 U-BOLTS-A
- 12=1/4 LOCK NUTS-B
- 12=1/4 WASHERS-C
- 6= TANNER RIVETS-D
- 6=5/16 SAE WASHERS-E



SS136H

2002 SUZUKI EIGER 400 AUTO&STAND.
 2002 SUZUKI VINSON 500 4X4

EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS .DUE TO THE TURING RADIUS ON SOME OF THE NEWER ATV'S. THE BOOT PROTECTORS HAVE BEEN MANUFACTURED SMALLER TO ALLOW FOR A TIGHTER TURING RADIUS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.

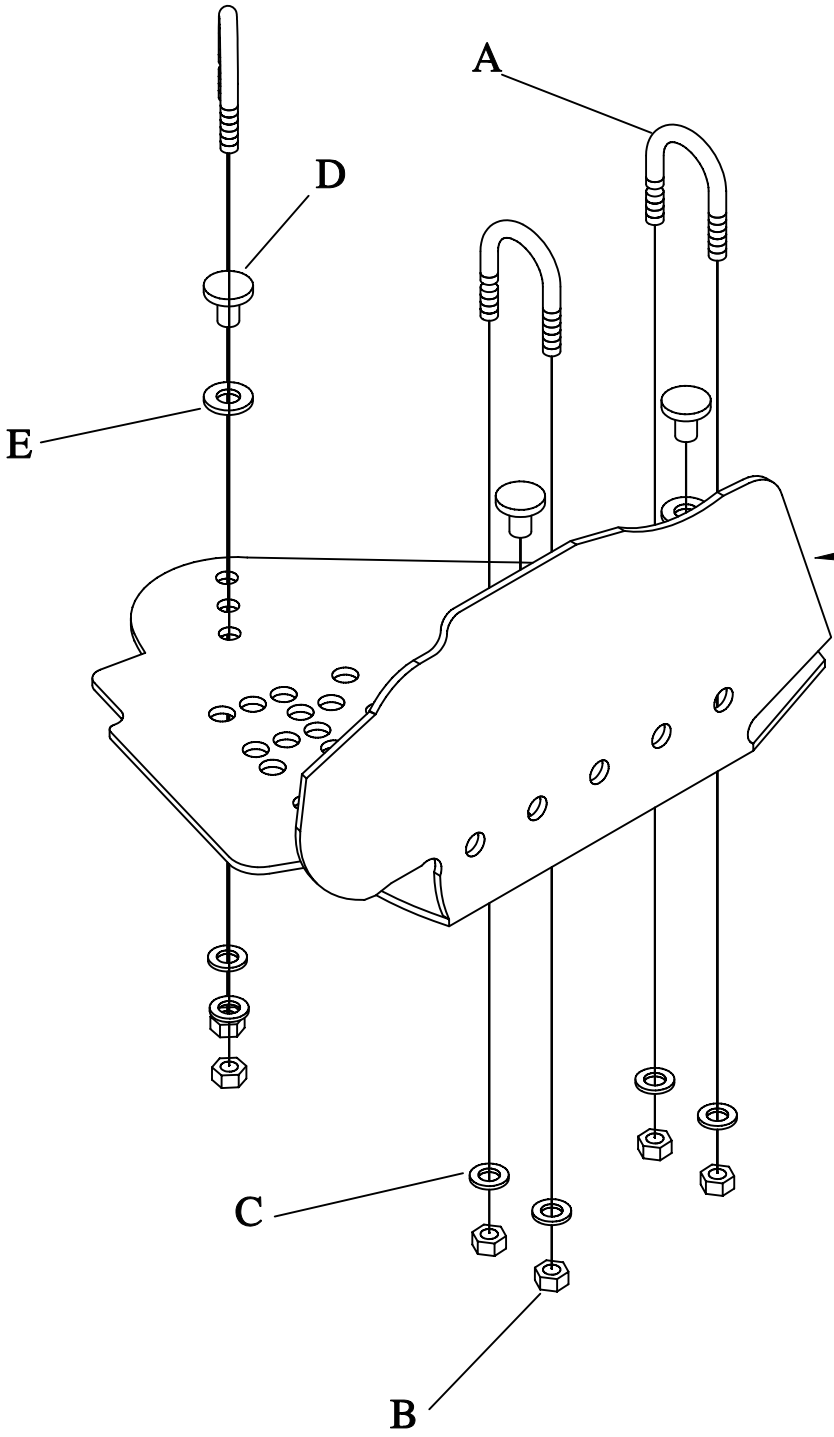

THE SS136H WILL BOLT INDER THE A-ARMS WITH THESE ENDS FACING THE INSIDE OF RIMS.