



A-1/4 LOCK NUTS=12

B-1/4X1/2 U-BOLTS=6

C-1/4 WASHERS=12

1/4 x 1 U-BOLTS=4


ONLY FOR MODELS WITH
UPDATED A-ARMS.

THE LOWER A-ARMS WERE UPDATED
FOR THE 2006 AND SOME 2005
MODELS. USE THE 1/4 X 1 U-BOLTS TO
SUBSTITUTE FOR THE 1/4 X 1/2
U-BOLTS FOR THESE DIFF. A-ARMS.

SS137

KAWASAKI 360 2003

THE SS137 WILL BOLT UNDER
THE A-ARMS. MUST REMOVE THE
FACTORY PLASTIC GUARDS.

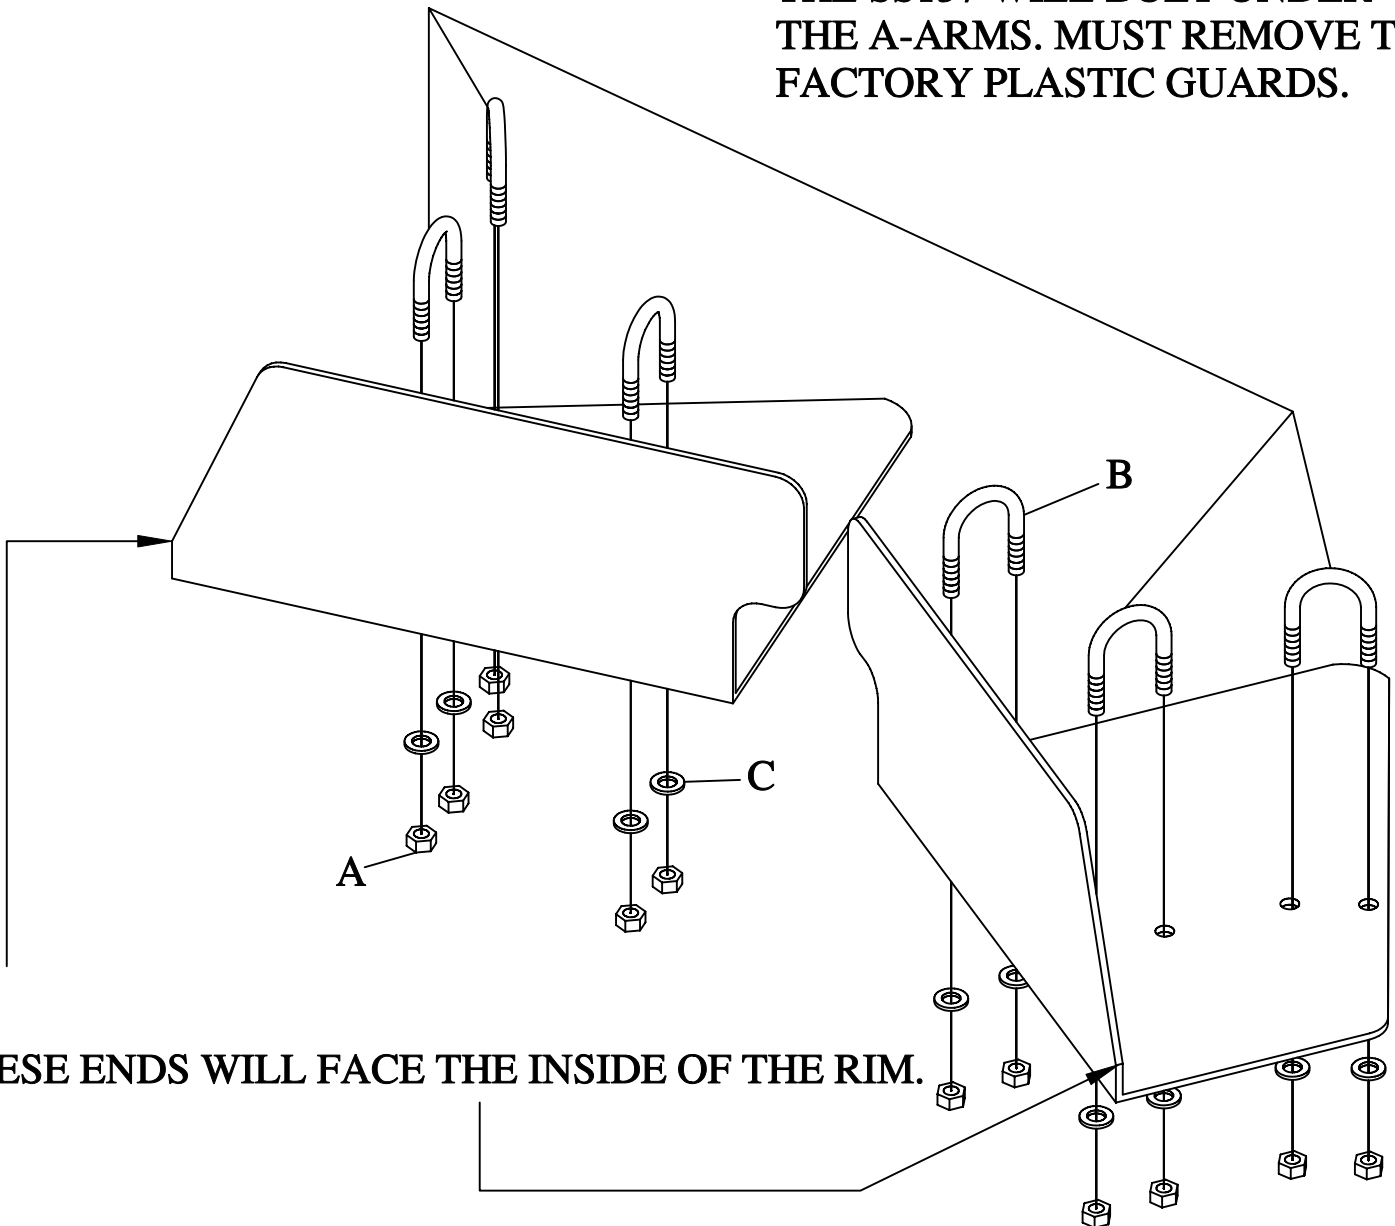

THESE ENDS WILL FACE THE INSIDE OF THE RIM.