


- 6=1/4X3/4 U-BOLTS-A
- 12=1/4 LOCK NUTS-B
- 12=1/4 SAE WASHERS-C
- 6=5/16 SAE WASHERS-D
- 6=#16LB TINNER RIVETS-E



# #SS143H-AL

YAMAHA RINO 660 4X4

ONCE THEY HAVE BEEN MOUNTED  
 TURN THE WHEELS LEFT TO RIGHT  
 MAKE SURE THE RIMS ARE NOT  
 RUBBING ANY PART OF THE SS143H.  
 THIS END ON THE SS143H-AL WILL  
 FACE THE INSIDE OF THE RIMS ONCE  
 THEY HAVE BEEN INSTALLED.

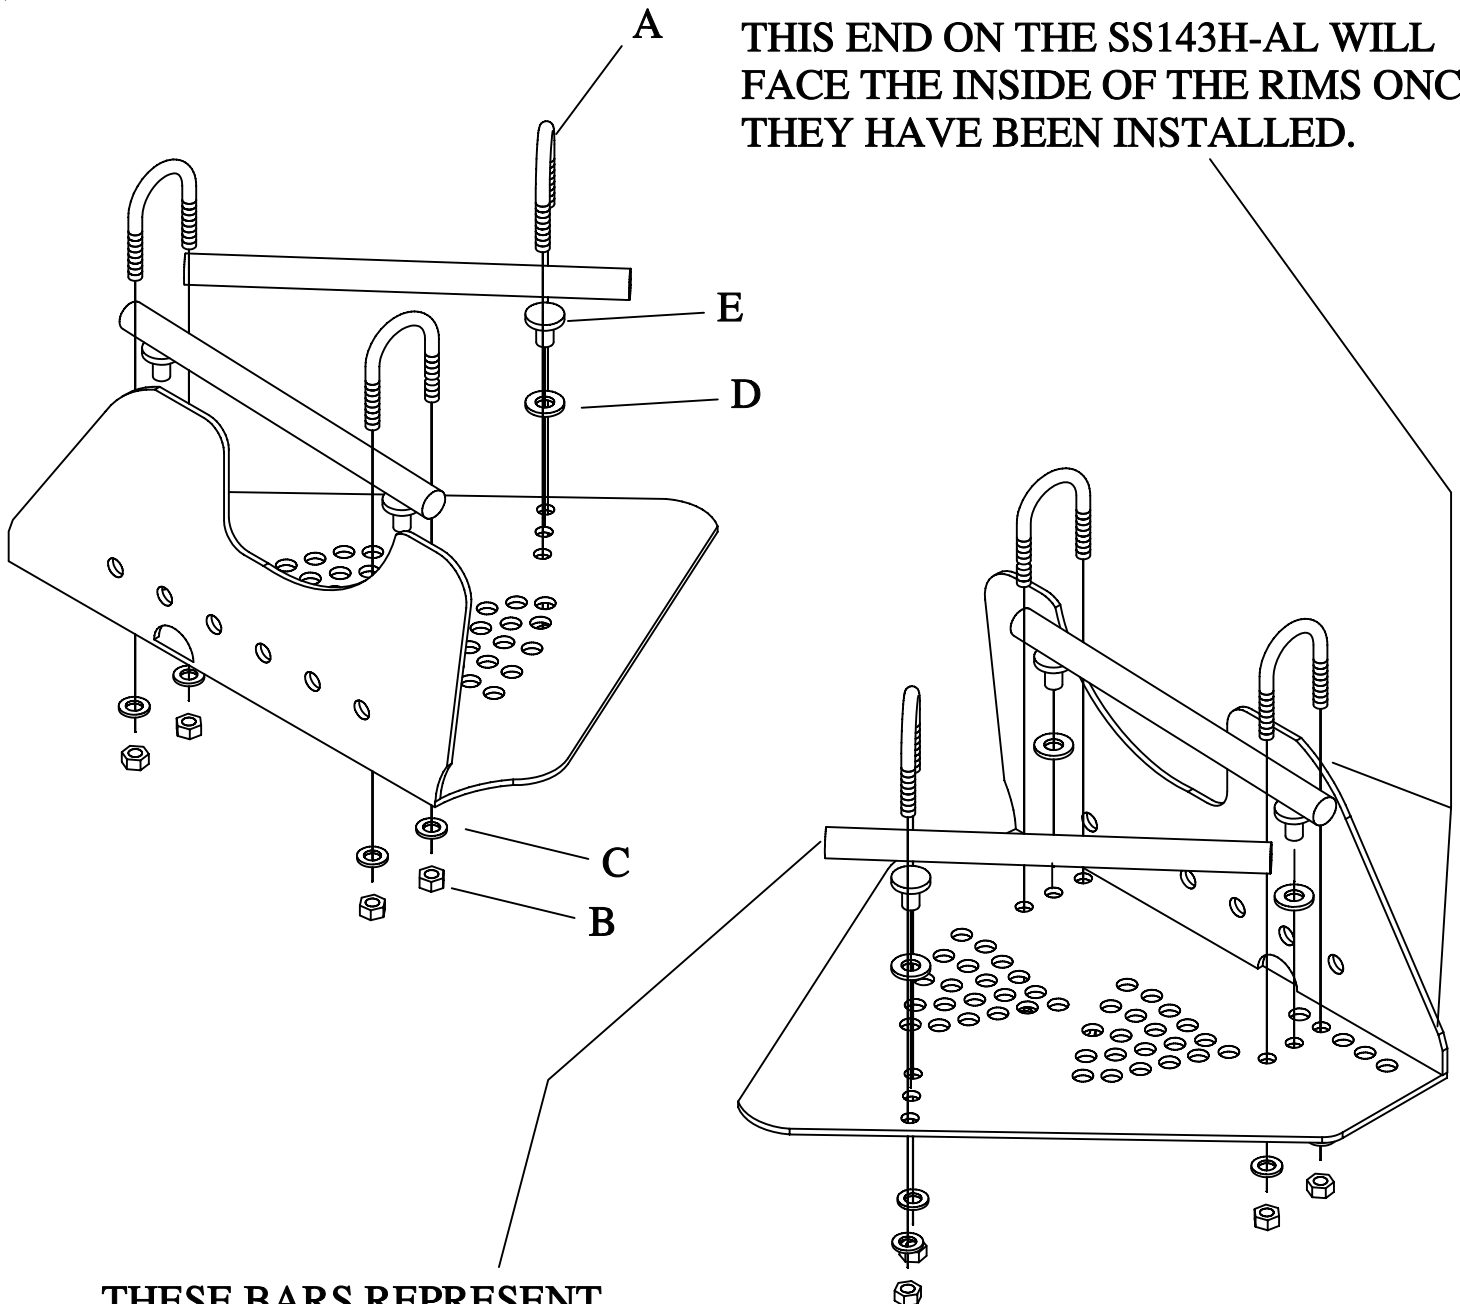

THESE BARS REPRESENT  
 THE A-ARMS ON THE UNIT.