





- 4=1/4 X 1/2 U-BOLTS-A
- 2=1/4 X 1 U-BOLTS-B
- 6=#16 TANNER RIVITS-C
- 6=5/16 SAE WASHERS-D
- 2=1/4 GALV. SPACERS
- 7/16" LONG-E
- 14=1/4 USS WASHERS-F
- 14=1/4 LOCK NUTS-G
- 2=1/4 X 1 1/4" BOLTS-H

#SS166H

YAMAHA GRIZZLY 700FI 4X4
(FRONT BOOT GUARDS)

**REMOVE THE PLASTIC GUARDS
BEFORE INSTALLING THE NEW
METAL GUARDS.**

**EVEN THOUGH THE NEW BOOT GUARDS
YOU HAVE PURCHASED WILL COVER
MORE THAN THE ORIGINAL PLASTIC
GUARDS. BOOTS HAVE BEEN REPORTED
TO BE TORN IN SOME CONDITIONS.
SAVANT MFG. (STRONG MADE) DOES NOT
WARRANTY ANY TORN BOOTS.**

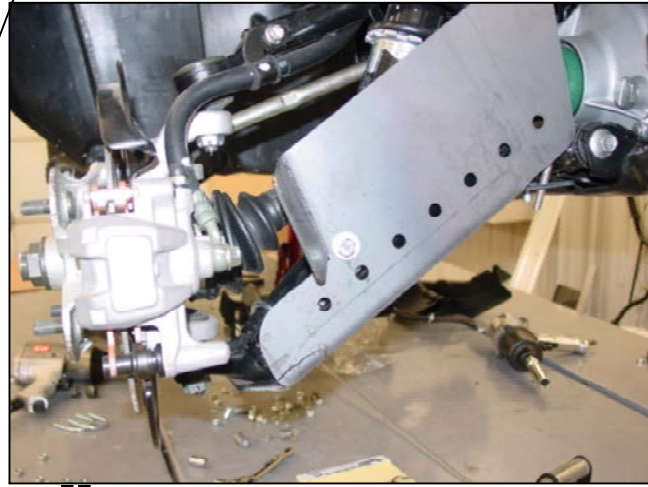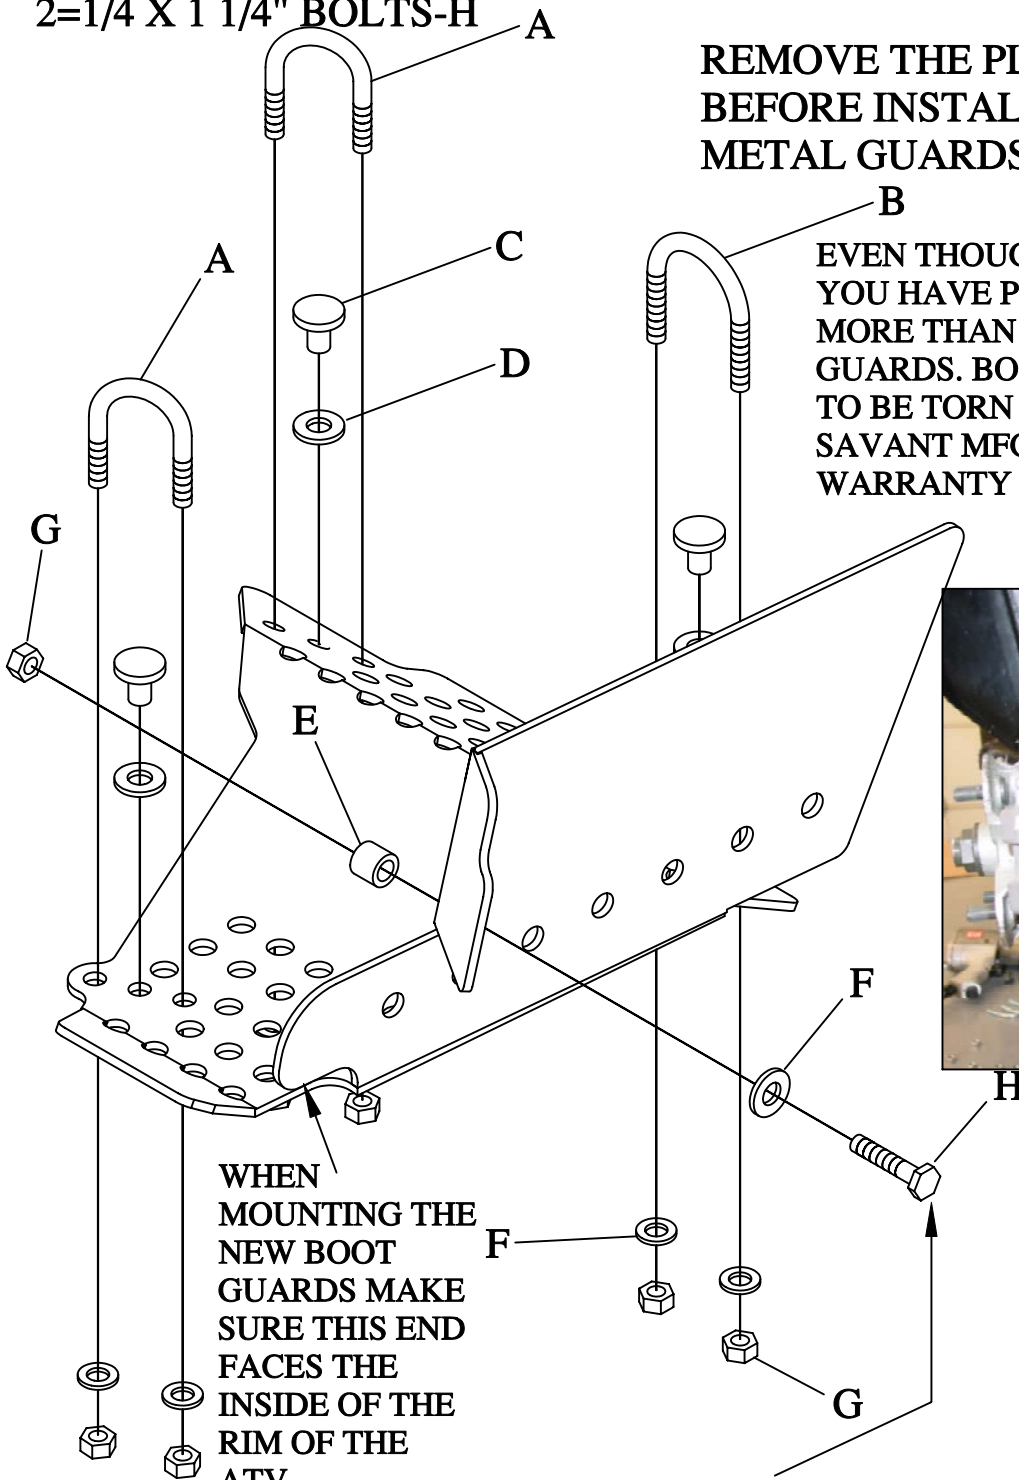

**WHEN
MOUNTING THE
NEW BOOT
GUARDS MAKE
SURE THIS END
FACES THE
INSIDE OF THE
RIM OF THE
ATV.**

**THIS BOLT WILL BOLT INTO
THE BOTTOM SHOCK MOUNT.**