


- 4=#16 TANNER RIVITS-A
- 4=5/16 SAE WASHERS-B
- 2=3/16 X 1 FLAT WASHERS-C
- 10=1/4 LOCK NUTS-D
- 4=1/4 X 1 YELLOW U-BOLTS-E
- 10=1/4 USS WASHERS-F
- 2=1/4 X 7/8 BOLTS-G



# #SS167H-AL

YAMAHA 700FI REAR BOOT GUARDS  
 EVEN THOUGH THE NEW BOOT GUARDS  
 YOU HAVE PURCHASED WILL COVER  
 MORE THAN THE ORIGINAL PLASTIC  
 GUARDS. BOOTS HAVE BEEN REPORTED  
 TO BE TORN IN SOME CONDITIONS.  
 SAVANT MFG. (STRONG MADE) DOES NOT  
 WARRANTY ANY TORN BOOTS.

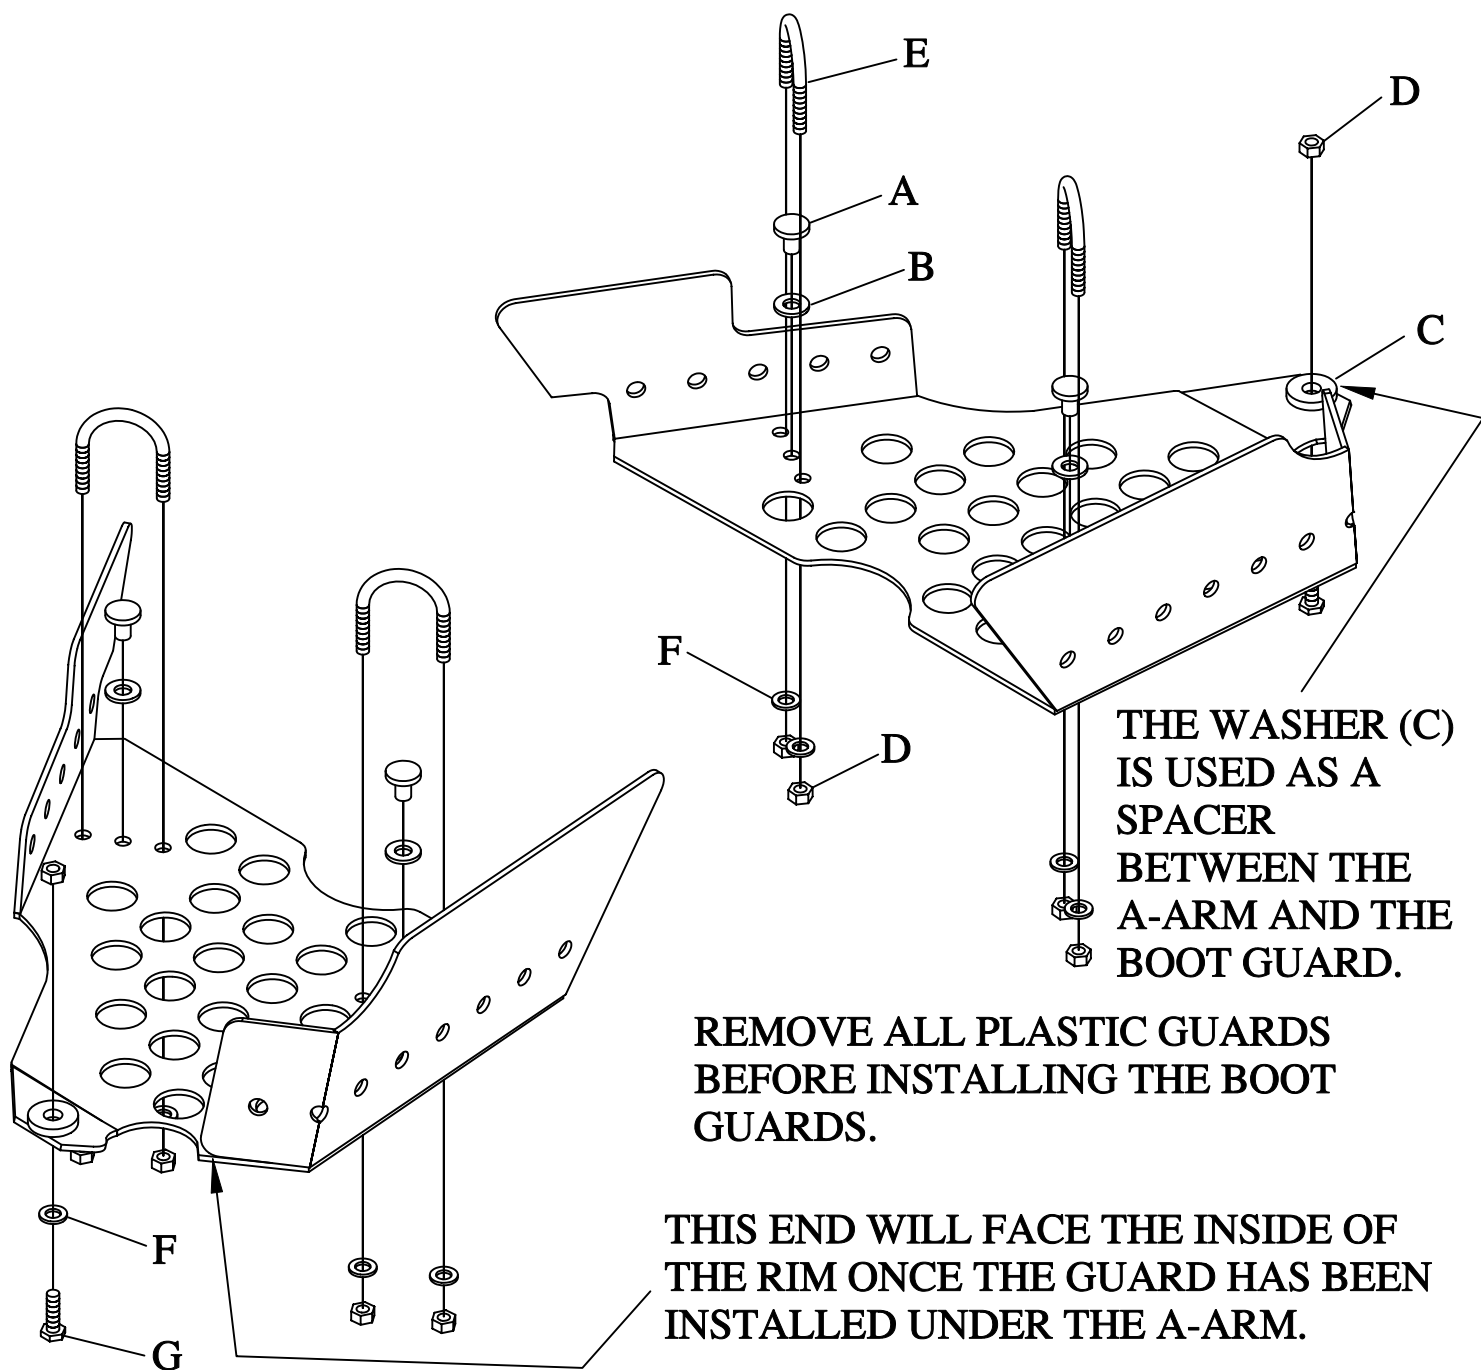

THE WASHER (C)  
 IS USED AS A  
 SPACER  
 BETWEEN THE  
 A-ARM AND THE  
 BOOT GUARD.

REMOVE ALL PLASTIC GUARDS  
 BEFORE INSTALLING THE BOOT  
 GUARDS.

THIS END WILL FACE THE INSIDE OF  
 THE RIM ONCE THE GUARD HAS BEEN  
 INSTALLED UNDER THE A-ARM.