



- 4=1/4X3/4 U-BOLTS
- 8=1/4 SAE WASHERS
- 8=1/4 LOCK NUTS
- 4=5/16X1 BOLTS
- 4=5/16 SAE WASHERS

- 2=5/16X1 1/2 BOLTS
- 2=5/16 USS WASHERS

**THIS PLATE IS DESIGNED TO FIT THE RAMSEY 2500LB AND ALSO THE WARN 2000LB , 2500LB WINCHES.**

RAMSEY'S WINCH IS SUPPLIED WITH A ROLLER FAIRLEAD. THE WARN WILL COME WITH A HAWSE FAIRLEAD. THIS DEPENDS ON THE WINCH THAT IS PURCHASED. BOTH THE ROLLER OR HAWSE FAIRLEAD WILL MOUNT IN THAT SPECIFIC POSITION.

↑ THESE BOLTS AND WASHERS ARE USED TO MOUNT THE HAWSE FAIRLEAD FROM WARN ONLY.

**298022-R44**

**POLARIS XPRESS 300 2X4**

**1ST STEP**


THIS IS A FEET FORWARD INSTALLATION OF THE WINCH. THE MOUNTING PLATE WILL LOCATE ON THE TWO FRONT VERTICAL FRAME TUBES. THE MOUNTING PLATE IS ORIENTED WITH THE SMALLER END OF THE PLATE FACING TOWARD THE GROUND. PLACE MOUNTING PLATE INTO POSITION, ATTACH THE FOUR 1/4 U-BOLTS WITH THE NUTS AND WASHERS AND SECURE TIGHTLY.

**SECOND STEP**

PLACE WINCH TO MOUNTING PLATE. THE WINCH WILL BE IN A FEET FORWARD POSITION, THE WIRE ROPE COMING OFF THE BOTTOM OF THE WINCH DRUM. THE WINCH MOTOR SHOULD BE ON THE RIGHT SIDE OF THE ATV. ATTACH THE WINCH WITH THE TOP TWO MOUNTING FEET ONLY AT THIS TIME, USING THE 5/16X1 BOLT AND 5/16 WASHERS AT THE TOP OF THE PAGE.

**THRID STEP**

ATTACH THE ROLLER FAIR LEAD OVER THE WIRE ROPE WINDOW IN THE PLATE USE TWO OF THE 5/16X1 BOLTS THAT ARE SUPPLIED AT THE TOP OF PAGE. RUN THE BOLTS THROUGH THE FAIR LEAD AND THE PLATE INTO THE WINCH.

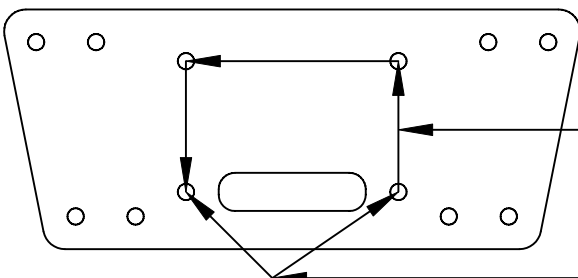

**THE RAMSEY WINCH WILL BOLT IN THESE HOLES USING THE 5/16X1 BOLTS AND FLAT WASHERS.**

THE ROLLER FAIRLEAD OR HAWSE WILL MOUNT OVER THESE HOLES INTO THE WINCH.