


2=5/16X1 1/2 BOLTS
6=5/16X1 BOLTS
4=5/16 LOCK NUTS
4=5/16 SAE WASHERS
4=5/16 LOCK WASHERS
2=5/16 USS LARGE WASHERS

S**M****I** SAVANT
MFG., INC.


R69

BOMBARDIER TRAXTER 650

FIRST REMOVE THE FRONT PLASTIC BUMPER SWING THE FRONT METAL BUMPER AWAY FROM THE BIKE TO INSTALL THE WINCH PLATE.

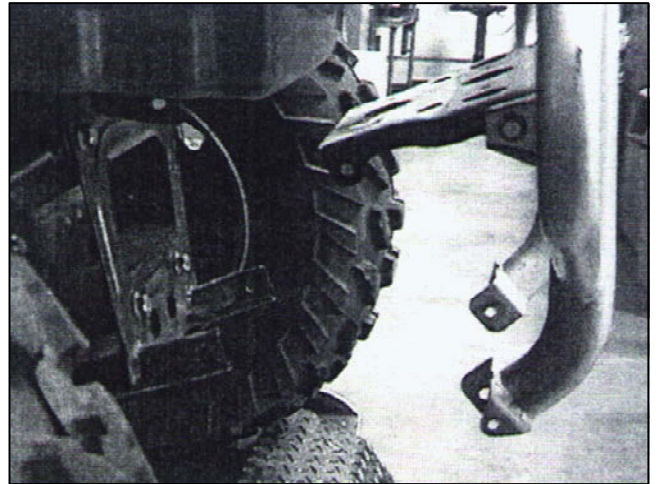

PLACE THE PLATE INTO THE FRAME AS SHOWN IN THE PICTURE THEN MOUNT THE PLATE USING A COMBO OF BOTH THE STOCK HARDWARE AND THE HARDWARE SUPPLIED.

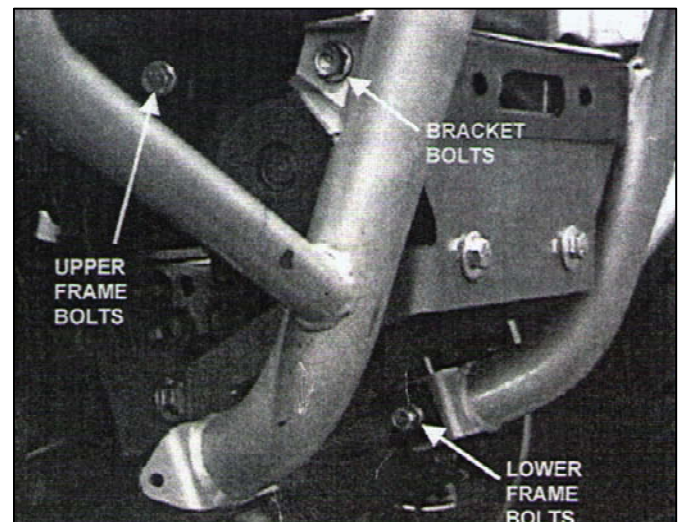

REASSEMBLE THE PLASTIC GUARD ONCE THE PLATE HAS BEEN MOUNTED INTO PLACE USE THE 5/16X1 1/2 BOLTS AND THE 5/16 USS LARGE WASHERS TO MOUNT THE ROLLER FAIR LED INTO PLACE.

